

DIY instruction chaise bordelaise

raumlaborberlin

needed materials

rough, bare wood

(90 x 10 x 2) cm

(60 x 10 x 2) cm

(45 x 10 x 2) cm

screws





(3 x thickness of wood – 2mm) x 5 mm

(2 x thickness of wood – 2mm) x 5 mm


x 68
x 14

x 4
x 13
x 2


recommended tools

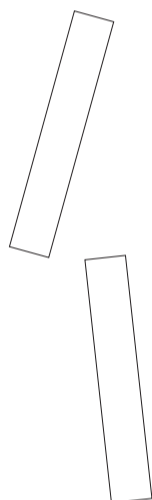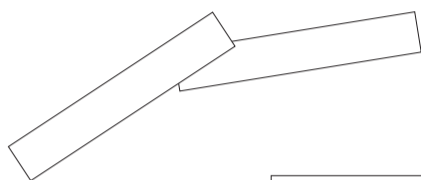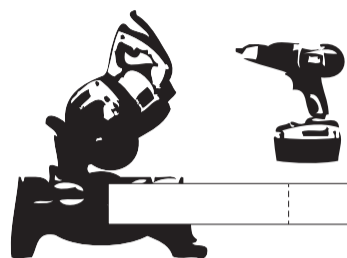


1

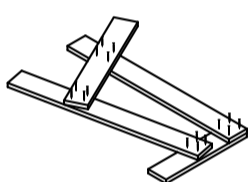


2

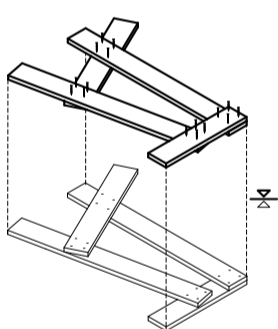


3

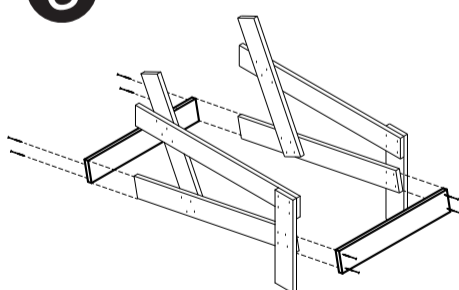


5

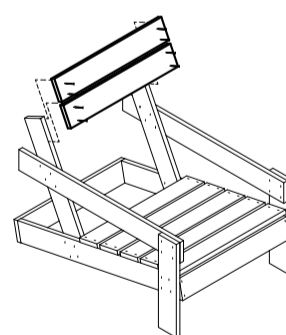


4

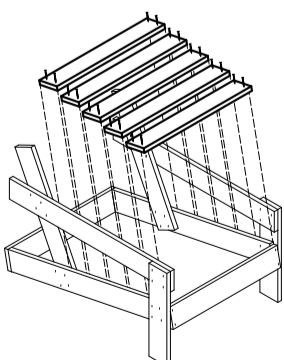

6

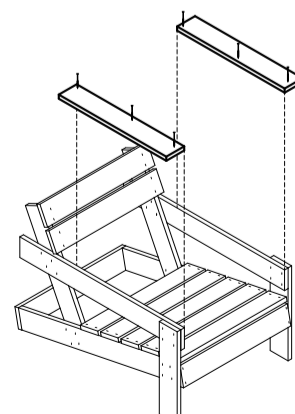

7

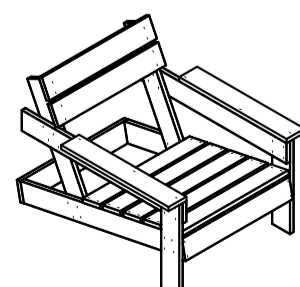

make it
take it
use it

